


3-D Crystal Lacquer Instructions


Welcome and thank you for purchasing 3-D Crystal Lacquer

***3-D Crystal Lacquer 2 oz Starter Kit**

Items in the kit:



3-D Crystal Lacquer (2 oz)



Spout



Cap




Applicator Tip




Cleaning Pin

***3-D Crystal Lacquer 4 oz Starter Kit (Refill)**

Items in the kit:



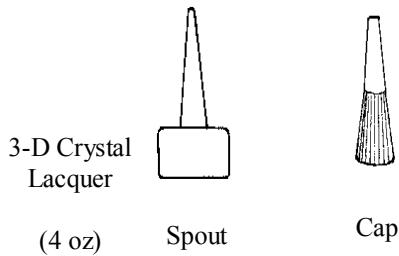



Note: The 4 oz Crystal Lacquer can be used as refill of 2 oz starter kit OR you can install Applicator Tip on the spout to apply onto images. (Applicator Tip sold separately)

Before You Start

- * Make sure your project and work area is dust free.
- * Use and store 3-D Crystal Lacquer at room temperature.
- * DO NOT SHAKE 3-D Crystal Lacquer. It will create air bubbles.
- * Have extra tissue and cotton swabs handy for corrections.
- * Paint brush (optional) can be used for background.
- * Normal drying time is 15 to 30 minutes. Larger areas and thicker application will take longer to dry.
- * When dried completely, it will appear "Crystal Clear"
- * After you finish the project, make sure to wash the applicator tip with running warm water thoroughly

How to install an applicator tip.

1). Remove the cap from the bottle and install the spout. (Fig. 1)

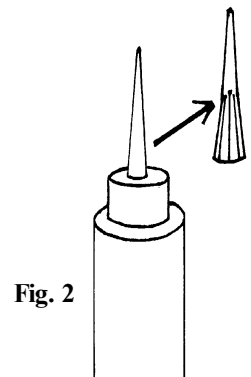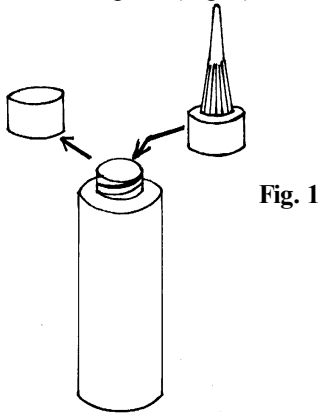

- 2). Dispose the original cap.
- 3). Remove the long cap from the top of the spout.(Fig.2)
- 4). Cut off the spout using scissors or knife as indicated on Fig.3.
- 5). Twist and push applicator tip onto the spout you just cut.(Fig.4)

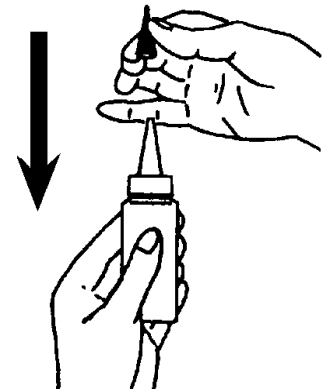
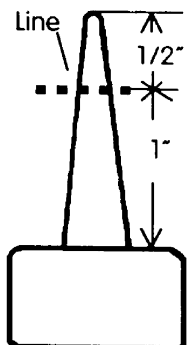


Fig. 3

6). After you use 3-D Crystal Lacquer, remove the applicator tip and wash with running warm water. Store the tip in safe place. Replace the long cap back onto the spout to keep lacquer from drying up.

How to prevent the tip from clogging.

- 1). While you are using 3-D Crystal Lacquer, let it sit (tip side down) on a moist paper towel in a container. This will prevent the tip from becoming dried & clogged while in used. (Fig.5)
- 2). When you are finished, wash the tip with running warm water making sure the inside is clean. You can blow into the tip to clear all water from inside the metal tube.


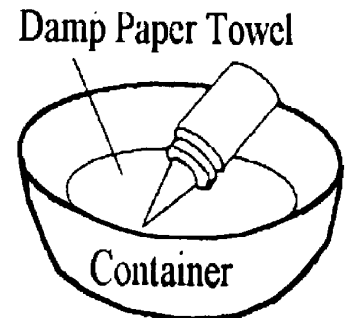



Fig. 5

Basic Technique of 3-D Crystal Lacquer

1-A) Outline image Outline every image you want to raise, and let it dry.

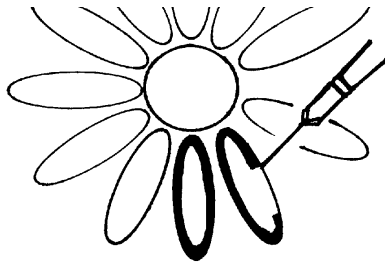


2). Fill inside the outlined image.(Keep adequate spaces between the image.)

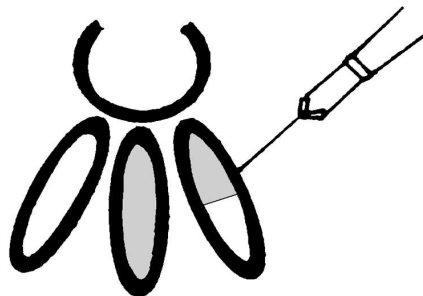

If the sections are too close to each other, skip over one section to the next and apply the lacquer. (This will prevent from merging.) After the lacquer is dried, go back to skipped section and apply lacquer. * In case of making mistakes or air bubbles get in the 3-D Crystal Lacquer, wipe them out with Q-Tip as soon as possible. Then reapply the lacquer.


3). Raise images. You can reapply 3-D Crystal Lacquer over the dry areas to raise levels. (Please do not overlap between the images!) * Use Q-Tip to correct overlaps*

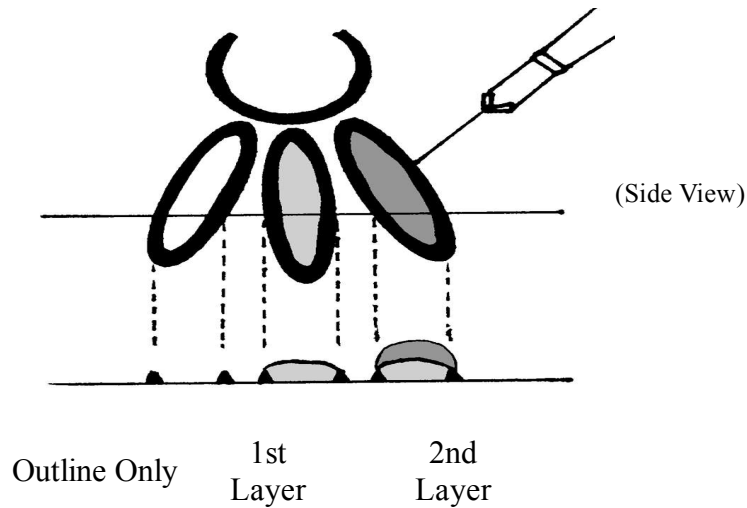

Advanced Techniques for Picture Images


(1). Wavy images such as flag or fabric, are raised wherever the color appears to lightest.

Raise the lighter colored areas

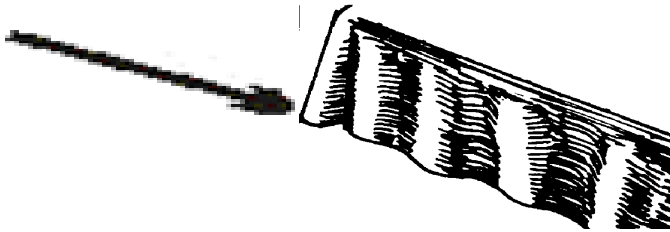

(2). Rounded images are raised the highest in areas that curve towards you. Areas that recede or are away from you can be outlined only.

(3). Use Soft-bristled paintbrush to apply a final layer to the spaces between the images.

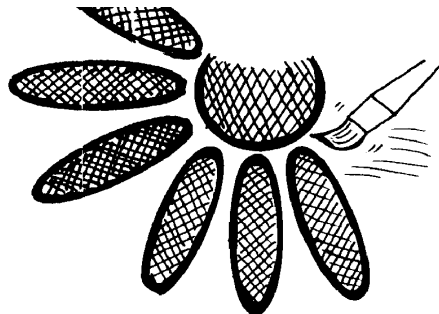

(4). Background images. If a background image is black or white, it shouldn't be lacquered. If a background has strong strokes, apply a thin coat of lacquer with a painting brush, following the brush stroke on the picture.

